

Instruction manual

oscar™ g3



Keep for future reference.

To reduce the risk of serious injury or death, read this owner's manual prior to using this stroller.

Suitable for newborn babies up to children weighing 20 kg.

Independently safety tested by for compliance to the Australian and New Zealand standard AS/NZS 2088:2013.

EDWARDS & CO

Introduction

Hey there!

Firstly, thanks for choosing Edwards & Co - we're excited you've chosen oscar to discover the joy of motion with your little tyke!

We have put a great deal of effort into ensuring that your buggy is safe and durable. Please take the time to carefully read this instruction manual in order to learn proper use and care tips. Following these instructions will keep your child as safe as possible for all the journeys to come.

We'd love it if you kept in touch. You can sign up for our website newsletter or follow us on Facebook. If you need anything, we're a simple phone call or email away.

Enjoy!

Regards

A handwritten signature in grey ink that reads "Mark Edwards". The "M" is large and stylized, and the "Edwards" is written in a cursive script.

Mark Edwards

A handwritten signature in grey ink that reads "Warwick Edwards". The signature is highly stylized and cursive.

Warwick Edwards

GENERAL WARNINGS



To greatly reduce the risk of injury or death, please read this owner's manual before installing and using this buggy to ensure proper use.

Buggy

- **NEVER LEAVE YOUR CHILD UNSUPERVISED IN THE BUGGY.**
- **ALWAYS APPLY THE PARKING BRAKE WHEN YOU PARK THE BUGGY OR WHEN TAKING YOUR CHILD IN/OUT OF THE BUGGY.**
- Make sure children are clear of any moving parts when adjusting the buggy, otherwise they may be injured. Care should be taken whilst folding and unfolding the buggy to prevent fingers being trapped.
- This buggy is suitable for one child only. Do not carry extra children or bags on this buggy.
- Do not place heavy weights on the handle of the buggy as it will impact the stability of the frame.
- The seat is suitable from birth up to 20 kg.
- The buggy is not intended to be a substitute baby cot or bed. It is only designed to enable safe transportation of children.
- Always take your child out of the buggy when on stairs.

Harness

- To avoid serious injury, always use the safety harness when your child is in the buggy. Always adjust the straps to suit the size of your child's body and to fit it firmly. A loose restraint or harness is **DANGEROUS**.
- Never leave a harness connected when not fitted to a child in the buggy. The harness can form loops which may be a strangulation hazard.
- The buckle **SHOULD ALWAYS** be easily accessible. It is important that your child can be released quickly in the event of an emergency.

GENERAL WARNINGS (cont.)



Accessories

- Use the safety strap located on the handle at all times.
- When installing the seat unit, carry cot or capsule in the buggy, ensure the parking brake is engaged at all times.
- It is unsafe to use accessories other than those supplied by Edwards & Co.
- Do not inflate the tyres any more than 26 PSI.

Storage

- Keep away from fire and extreme heat. Do not store in areas that may get particularly hot in summer like roof space or beside shed walls.

Edwards & Co buggies are manufactured and tested to the highest durability and quality standards. By following instructions as well as care tips, your buggy will last for many years to come.

If in doubt, please contact Edwards & Co or your retailer.

Stroller components

In this manual we will help you with putting your oscar g3 together. The product should come with the following:

Main components

- buggy frame
- seat unit
- 3 pneumatic tyres (1 front + 2 back)
- bumper bar

Bonus features

- rain cover
- tyre hand pump

Wheel installation and removal

Rear wheels:

To **install** a wheel, press the release button on the wheel and simply insert the rod on the wheel hole located on each wheel strut until you hear a **CLICK!**



To **remove** a wheel, press the button on the wheel hub cap and pull outwards.

Wheel installation and removal

Front wheel:

To **install** the wheel, insert the wheel rod into the frame hole as pictured until you hear a **CLICK!**

NOTE- ensure the front wheel lock lever is disengaged beforehand so the wheel connects (see page 11).

To **remove** the wheel, push the lever located at the top of the wheel and hold inwards (towards the buggy) as indicated by the arrow.



Unfolding and folding the stroller



Unfolding:

1. Stand the buggy upright (as pictured above left) or on the ground with the handle facing upwards (as pictured below).
2. Lift the black clip (as pictured above left) located on the right hand side of the frame away from the catch clip and pull the handle of the buggy upwards.
3. The buggy will unfold and **CLICK!** into place.


Folding:

1. Pull the two sliding levers (as pictured above right) just below the handle hinge (on the frame) then push the handle downwards towards the floor.

NOTE - For compact folding, fold the buggy with the seat unit removed or with the seat unit facing forwards. The collapsed buggy should look as pictured below.



Seat unit installation and removal

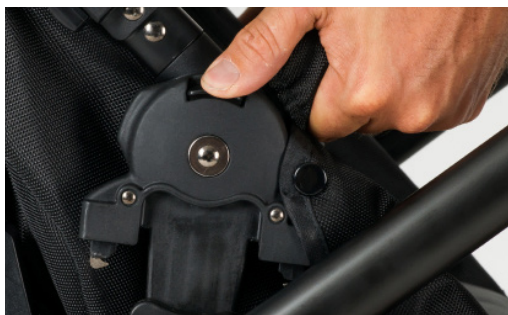

To **install** the seat unit, insert the locking adaptors into the frame and push downwards (do not press the release buttons when installing).

WARNING - Ensure the seat unit is locked into the buggy frame before use.

To **remove** the seat unit, press the two release buttons at the same time and lift upwards (as pictured above).

NOTE - The seat unit can be installed in a front or rear-facing position.

Bumper bar installation and removal

To **install** the bumper bar, insert the rods on each end of the bar into the bumper bar retaining bracket until you hear a **CLICK!**

To **remove** the bar, press the release buttons located on the underside of the bumper bar retaining bracket (as pictured below).



Canopy installation and removal

1. Locate the canopy hood hinge (as pictured).
2. Using a phillips screwdriver, remove the two screws on one of the canopy hood hinges.
3. Pull out the hood frame tubes from it's housing in the hinge.
4. Remove the fabric canopy.
5. Thread the new fabric canopy through the hood tubes (the front of the canopy threads through the slightly bent tube).
6. Re-insert tubing and screw back into place.



Seat, leg rest and handle adjustment

Seat recline:

To adjust the recline, pull up the black plastic lever at the rear of the seat upwards and raise or lower the seat to the desired position (lie flat, reclined or seated).

Leg rest height:

To raise or lower the leg rest, press the two buttons on both sides of the leg rest hinge (as pictured below) until you hear it **CLICK!** into position.



Handle height:

To adjust the handle height, press the two buttons on the inside of the handle hinge and raise or lower (as pictured below).



Using the seat harness

Securing the harness:

1. Place your child in the seat. Make sure that your child's back and bottom are flat against the seat. This will maximise comfort and allow the harness to properly secure your child.
2. Position the height of harness according to your child's height. The harness straps should be level with their shoulders.
3. To fit the harness, link the two right hand fittings together and then **CLICK!** into the buckle. Do the same for the two left hand fittings. Check that the buckle is secure by pulling the buckle. There should be a strong connection.

Unlocking the harness:

1. To remove the harness, press the large button on the front of the buckle until it releases (as pictured below).



Shoulder strap height

There are three height slot positions for the shoulder straps. As your child grows, you will need to move the straps according to your child's height.

IMPORTANT - The shoulder straps should be positioned so that they sit level with your child's shoulders.

Parking brake and front wheel lock

Parking brake:

To **engage** the brake, push the red lever located on the right hand wheel strut downwards until you hear a click. Give the buggy a small jiggle to ensure it engages. This brake locks both rear wheels.

To **release** the brake, press the brake downwards until you hear a click. This releases the brake.



Front wheel lock:

The swivel lock is located at the top of the handle on the right hand side of the buggy.

To **lock** the swivel, press the small button located on the outside of the lock and simultaneously lower the lever. This locks the swivel and holds the wheel in a straight position.

To **free** the wheel, raise the lever upwards until you hear a **CLICK!**



Caring for your stroller

Important information

- We recommend storing your buggy indoors to avoid corrosion.
- We recommend regular inspection and maintenance of locking devices and security of essential components.
- Regularly check all parts for wear and tear. Lubricate if tight with a silicone based product. Do not use spray petroleum lubricants such as 'CRC'.
- The fabric is washable. To clean the liner, we recommend sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.
- **NEVER** tumble dry.
- **NEVER** clean with abrasive, ammonia-based, bleach-based or spirit-based cleaners.
- If the wheels become damaged or worn, discontinue use and replace.
- Avoid sun exposure for long periods to prevent fading and damage to the fabric.
- Avoid submersing the product in salt water. If you do expose it to salt water, ensure you wash the frame (particularly moving parts) in cold fresh water.
- **NEVER** wring any fabrics.
- Dry thoroughly before storage.
- Store in a well-ventilated area, away from direct sunlight which could damage or fade your car seat.
- Store in a safe place when it is not being used. Avoid placing heavy objects on top of it.
- **NEVER** allow the seat to come into contact with corrosive substances such as battery acid or petroleum products.

oscar was a legacy in our family and we hope his memory lives on with yours. Please take great care of him and he will do the same for you!

Warranty information

All Edwards & Co products are guaranteed for two years from the date of purchase against defects in material and workmanship.

If we determine that the product has a manufacturing fault, we will repair or replace it free of charge to you. The decision to repair or replace is solely at the discretion of Edwards & Co. Proof of purchase must be provided.

The warranty is “return to base” and not a free in-home service. This means the customer is responsible for any inwards freight charge to return the product to an Edwards & Co representative for warranty or service.

Our warranty excludes claims resulting from misuse, abnormal use, overloading, general wear and tear, child outgrowing the product, not following instructions, transportation damage (including airline or freight damage), poorly maintained product, dropped goods, negligence, second-hand product, modified product, colour fading, over inflation, mould, damage to handle foam in use or fabric cuts and tears. Our warranty also does not cover tyre punctures or corrosion to frames or fasteners as a result of atmospheric or environmental conditions.

Any replacement will not give the right for the warranty period to be extended.

Edwards & Co does not cover warranty if the product has been purchased second hand or from an unauthorised reseller.

For the complete terms and conditions of our warranty, please visit our website - edwardsandcobaby.com/warranty

Edwards & Co
PO Box 35-445
Browns Bay, Auckland 0753
NEW ZEALAND

e: hello@edwardsandcobaby.com
p: 0800 ED AND CO
(0800 33 263 26)



edwardsandcobaby.com